ORGAN® NEEDLES INFORMATION







SK series enable stable loop formation under severe sewing conditions


SK Series

Skipped stitches and thread breakage may occur by missed thread pick up which unstable loop formation can cause.

The deep scarf and the specially shaped area around the eye of SK series guarantee stable loop formation and beautiful seams.



SK Series

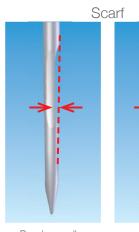


Regular needle SK Series


SK1 Series *Patented needle

This series is effective in preventing skipped stitches of thick materials including car seat, denim, etc.

The key feature enables easy looper adjustment without any processing of needle plate compared to other needles with crank geometry.

Needle with crank geometry

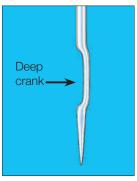

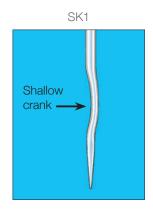

SK2 Series

This series with a deep scarf enables consistent seam appearance under severe conditions.

FLX118-SK2 is effective in preventing missed thread pick up using high-elastic threads including woolly thread.

Missed thread pick up using woolly thread







SK1 Series

SYSTEM	14	16	18	19	20	21	22	23	24	NORMAL SYSTEM
DPX17-SK1	•	•	•	•	•	•	•	•	•	DPX17
DPX134-SK1	•	•	•	•	•	•	•	•		DPX5, DPX134
DPX35R-SK1	•	•	•	•	•	•	•	•		DPX35R
UYX128GAS-SK1		•	•	•	•	•				UYX128GAS

SK2 Series

SYSTEM	8	9	10	11	12	NORMAL SYSTEM
FLX118-SK2	•	•	•	•		FLX118GCS
TVX5-SK2					•	TVX5



ORGAN NEEDLE CO., LTD.

1 Maeyama, Ueda-shi, Nagano-ken 386-1436, Japan TEL: +81-268-38-3363, FAX: +81-268-38-3590

http://www.organ-needles.com/ E-mail: sales-dpt@organ-ndl.co.jp